


Operating Tips



The MK-7

“ Precision Cutting... the EZ way ”

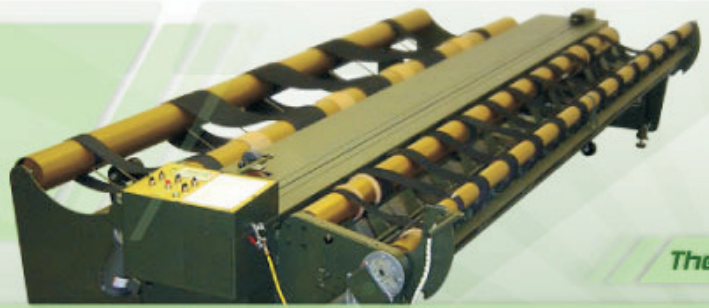

Remove the screws from the cover on the right side. Remove the screws from the cover on the left side.

Roll Cutting Machines

[Unpacking and setup](#)

[Roll up side cradle support pin](#)

[Controlling the roll on the load side cradle shuttle](#)

[Measuring, Cutting, and Packaging](#)

[Reverse Rolling / Remnants](#)

[Correct measuring the balance of a roll or remnant](#)

Base Cutting Machines

[Unpacking and setup](#)

[Blade Information \(EZ Slitter\)](#)


[Blade Information \(EZ Slitter Jr.\)](#)

[Tape Dispenser](#)

[Adjustments and Cutting](#)



Remove upper grate. Remove lower grate.

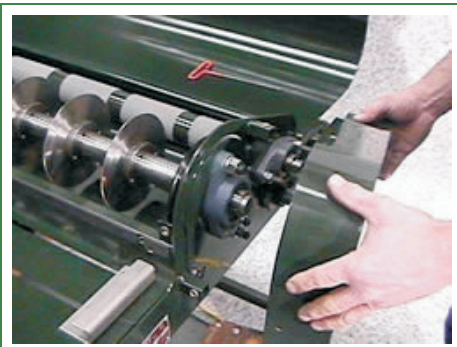

Loosen the set screws.

Contact EZCUT


420 Des Meurons St. Unit 106
Winnipeg, Manitoba
Canada, R2H 2N9

Phone: 1.204.235.1122


Toll Free: 1.800.661.5156

Fax: 1.204.237.9339

Email: talktous@ezcut.com

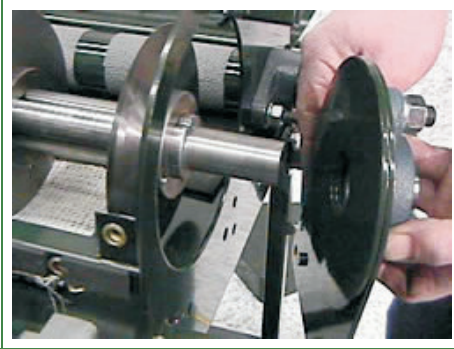


Carefully slide blade assembly off.

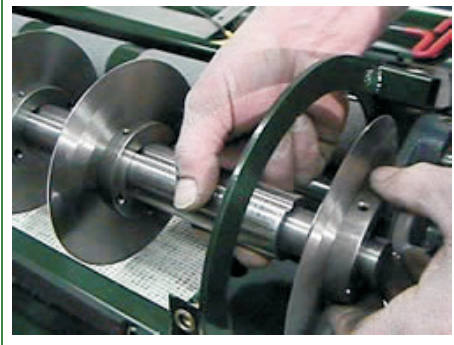


Loosen the blade and carefully remove the blade.




Line up the blade notches with the holes. Keep the set screw holes together.

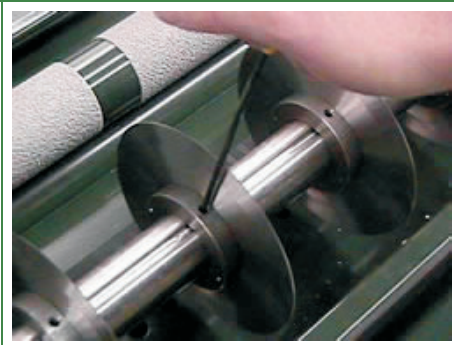

Loosen the set screws.

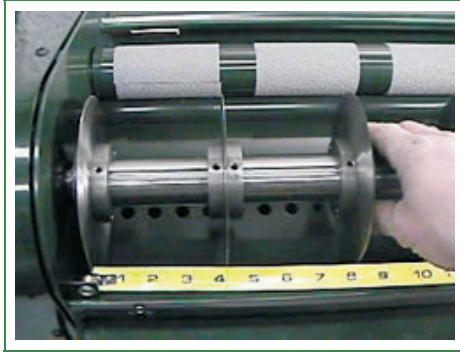

Carefully move blade assembly into position. Set blade positions and tighten screws.

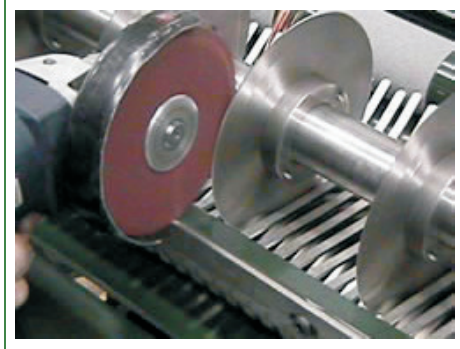

While the machine is running, using your angle grinder with 120grit to sharpen the blades. Sharpen both sides at about 15deg. The proper safety gear must be used while sharpening!